

Manual Switches

Button Lenses/Incandescent or Non-lighted Display

MML51 ORDER GUIDE

For standard plunger MML pushbuttons.

MML51E

Lens Type
Rectangular Lenses:
MML51E Switch lens*
MML51G Indicator lens
Square Lenses:
MML51C Switch lens
MML51D** Indicator lens

20

Display/Legend Type
Transmitted Color:
10 No legend
20 With legend

R

Color
R Red
Y Yellow
G Green
W White
K Black (Opaque)

Example: MML51E20R

Incandescent or non-lighted display switch lens; red transmitted color, with legend.

LEGENDING

Use the MML Legend Order Sheets on pages 81 and 82 to specify legending.

* Use MML51E with MML41 rectangular pushbutton style indicators.

** MML51D for use with MML41 square.

Button Lenses/LED

MML52

MML52 ORDER GUIDE

For standard plunger MML pushbuttons.

MML52G

Lens Type
Rectangular Lenses:
MML52E Switch lens, LED display
MML52G* Indicator lens LED display
Square Lenses:
MML52C Switch lens, LED display
MML52D** Indicator lens, LED display

10

 
Display/Legend Type
Transmitted Color:
10 No legend
20 With legend

Y

Color/ Illumination
LED Display:
R Red
Y Yellow
G Green
C Clear

Square lenses have tabs on two sides. Before snapping in place, the tabs should be at right angles to the housing side with the MICRO SWITCH logo. (See below.)

MICRO SWITCH logo on housing



Example: MML52G10Y

LED display indicator lens; yellow transmitted color, no legend.

* Use MML52E with MML41 rectangular pushbutton style indicators.

 
** Use MML52D with MML41 square.

HOW TO INSTALL LENSES


Keytabs on two sides of the lenses mate with matching button slots.

Rectangular lenses have tabs on the long sides. Seat a long side before snapping in place.

HOW TO INSTALL LENSES

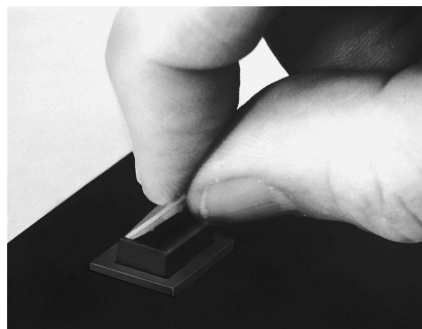

 1. Seat lens.

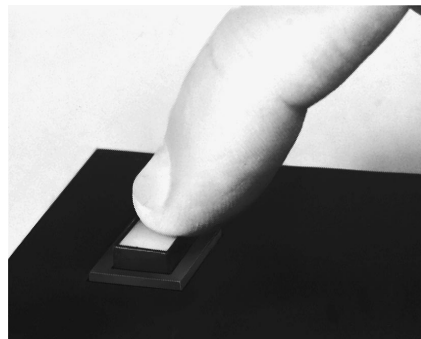

2. Snap in place.